


## OPERATING INSTRUCTIONS

All light set functions can be performed using the remote control that is included. To initially activate the remote you will need to press the 7 and 8 button simultaneously. Once the remote has been activated all other remote functions will work. If you do not want to use the remote, you can cycle through the 8 light functions by continually pressing the button on the back of the electrical box. You will not be able to set the timer function without the remote.

1. Push the **ON** button to turn the light set on.
2. Push the **OFF** button to turn the light set off.
3. To activate built-in 8-hour timer, turn the lights on by pushing the **ON** button and then push the **TIMER** button- the lights will blink one time for the timer. To set a new time, you will need to push the **TIMER OFF** button and repeat timer activation steps above.
4. The #1-8 buttons, push each button to change the light set function:
  1. Combo
  2. Medium Twinkle
  3. Sequential
  4. Slow Twinkle
  5. Chasing/Flash
  6. Slow Fade
  7. Twinkle/Fast
  8. Steady On

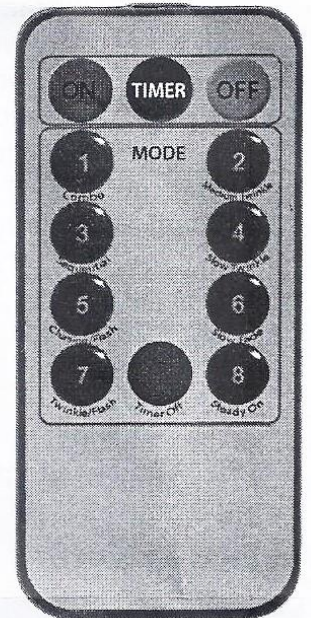

### ADDITIONAL INSTRUCTIONS

- Remove the light set from the package and unroll the garland before use.
- The light set can only be connected to the IP44 Transformer, which is enclosed in the box.
- The light set and transformer can be used indoors and outdoors.
- Ensure that the power source is the same as the specified power.
- The 8 light functions are controlled by a control box.
- Bulbs cannot be replaced; should a bulb become defective, then the others will continue to function.
- Do not connect this light set electrically to another one.
- The power cord of the light set cannot be replaced; if the cord is damaged the light set should be destroyed.
- Avoid any damage to the isolation of the wiring.

Please keep all the relevant information for future reference!

## **WARNING - IMPORTANT SAFETY INSTRUCTIONS**

Read all instructions before using this product.

When using an electrical product, basic precautions should always be followed, including the following to reduce the risk of burns, fire, electric shock or injury:

1. Remove the light set from the packaging before use. Do not connect the light set to the electrical outlet while it is still in the packaging.
2. This is an electric product - not a toy! To avoid risk of fire burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
3. Use this product only for its intended use as described in these instructions.
4. Never operate the product if it has a damaged cord or transformer, is not working properly, has been dropped into water or damaged in any way.
5. Keep the cord away from heated surfaces.
6. Unplug the product when leaving the house, when sleeping, or if left unattended.
7. Always unplug this product from the electrical outlet before handling or cleaning to reduce the risk of shock.
8. Do not mount or place near gas or electric heaters, fireplaces, candles, or similar sources of heat.
9. This seasonal product is not intended for permanent installation or use.
10. If the product is placed on tree, the tree should be well secured and stable.
11. When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are dry or break easily.

### **SAVE THESE INSTRUCTIONS FOR FUTURE USE**

### **INSTRUCTIONS**

Avoid placing the product in a place where it can fall. Avoid overheating. Do not cover the power supply cord with any material. Uncoil the power supply cord and connect the transformer in any domestic outlet (120 VAC). Place power supply cord where it will not be exposed to traffic. Do not run the power supply cord through doorways, holes in walls or floors. Do not drive, walk, drag or place objects over power supply cord. Fully insert the transformer into the outlet. Do not remove, bend or modify any metal prongs or pins of power supply cord. Do not use excessive force to make connections.

### **STORAGE**

When product or components are not in use, store them in a safe dry place away from children.

Always store indoors.

Always unplug by pulling the transformer from the outlet. Do not unplug by pulling the cord.

Coil the power supply cord and put the product inside its original packaging when not in use.